

# VALVOLE APR UNLOADER VALVES - REGULATEURS - REGULADORES

Valvole regolazione pressione, attacco con viti cave pompe serie: WM - TM

Unloader valves with banjo connections for pumps WM - TM series

Régulateurs de pression avec vis de fixation pour pompes série WM - TM

Válvulas de regulación de presión, conexión con tornillos de fijación para bombas WM - TM

Temperatura max: 60°C - 140°F

Max temperature: 60°C - 140°F

Température max: 60°C - 140°F

Temperatura máx: 60°C - 140°F

## APR 40



CODICE CODE (*)	COLOR	MODELLO MODEL	PRESSIONE MAX MAX PRESSURE		PORTATA FLOW		Attacco pompa Port size	Entrata Inlet	Uscita Outlet	PESO WEIGHT	
			BAR	PSI	l/min	GPM	BSP	BSP		Kg	lbs
05.8702.97.3	Green	APR 40	280	4000	21	5.5	3/8 1/2	1/2 - M	3/8 BSP - M	1.10	2.4
05.8705.97.3	Green	APR 40	280	4000	21	5.5	3/8 1/2	1/2 - M	22x1.5 - M	1.15	2.5

## APR.I 40



CODICE CODE (*)	COLOR	MODELLO MODEL	PRESSIONE MAX MAX PRESSURE		PORTATA FLOW		Attacco pompa Port size	Entrata Inlet	Uscita Outlet	PESO WEIGHT	
			BAR	PSI	l/min	GPM	BSP	BSP		Kg	lbs
05.8701.97.3	Green	APR.I 40 Fixed injector 2.1 (*)	280	4000	21	5.5	3/8 1/2	1/2 - M	3/8 BSP - M	1.15	2.5
05.8704.97.3	Green	APR.I 40 Fixed injector 2.1 (*)	280	4000	21	5.5	3/8 1/2	1/2 - M	22x1.5 - M	1.20	2.65
05.8700.97.3	Green	APR.I 40 Adjust injector 2.1 (*)	280	4000	21	5.5	3/8 1/2	1/2 - M	3/8 BSP - M	1.15	2.5
05.8703.97.3	Green	APR.I 40 Adjust injector 2.1 (*)	280	4000	21	5.5	3/8 1/2	1/2 - M	22x1.5 - M	1.20	2.65

(\*) Optional ugello eiettore 1.6 - 1.8 - 2.3 -Optional injector nozzle 1.6 - 1.8 - 2.3

Optionel buse injecteur 1.6 - 1.8 - 2.3 -Opción boquilla eyectora 1.6 - 1.8 - 2.3

(\*\*) Versione speciale per umidificazione: stesso codice con ultima cifra "B" in sostituzione del "3"

Special version for misting/fogging: the same part nr. with the last figure "B" that replaces "3"

Version spéciale pour brumisation : la même référence avec la dernière lettre "B" qui remplace "3"

Versión especial para humidificación : el mismo código con la última cifra "B" que reemplaza el "3"

## SCHEMA INSTALLAZIONE VALVOLA APR.I UNLOADER VALVES APR.I-INSTALLATION

